


## Getting Started

Thank you for choosing our signal jammer. Allow us to provide you with an introduction and a clear understanding of the button placements, accessory functions, and other hardware features.

### Left-side View

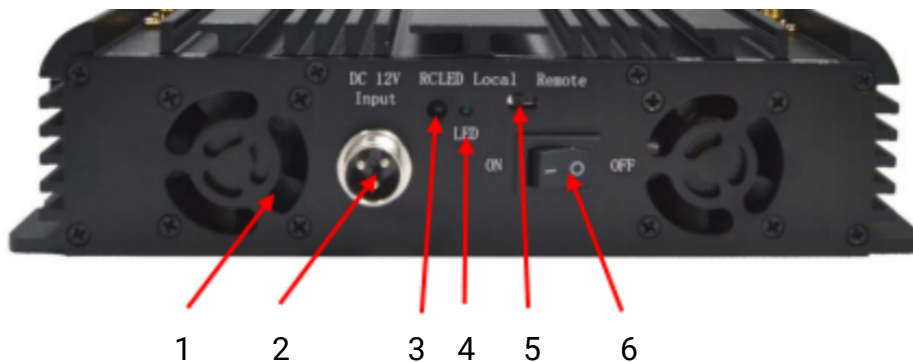


- 1: Cooling fans
- 2: DC 12V IN Power Jack
- 3: Infrared Remote Control LED
- 4: LED Indicator Light
- 5: Remote or Local control Switch
- 6: Power Switch

### Right-side View



- 1: Cooling fans

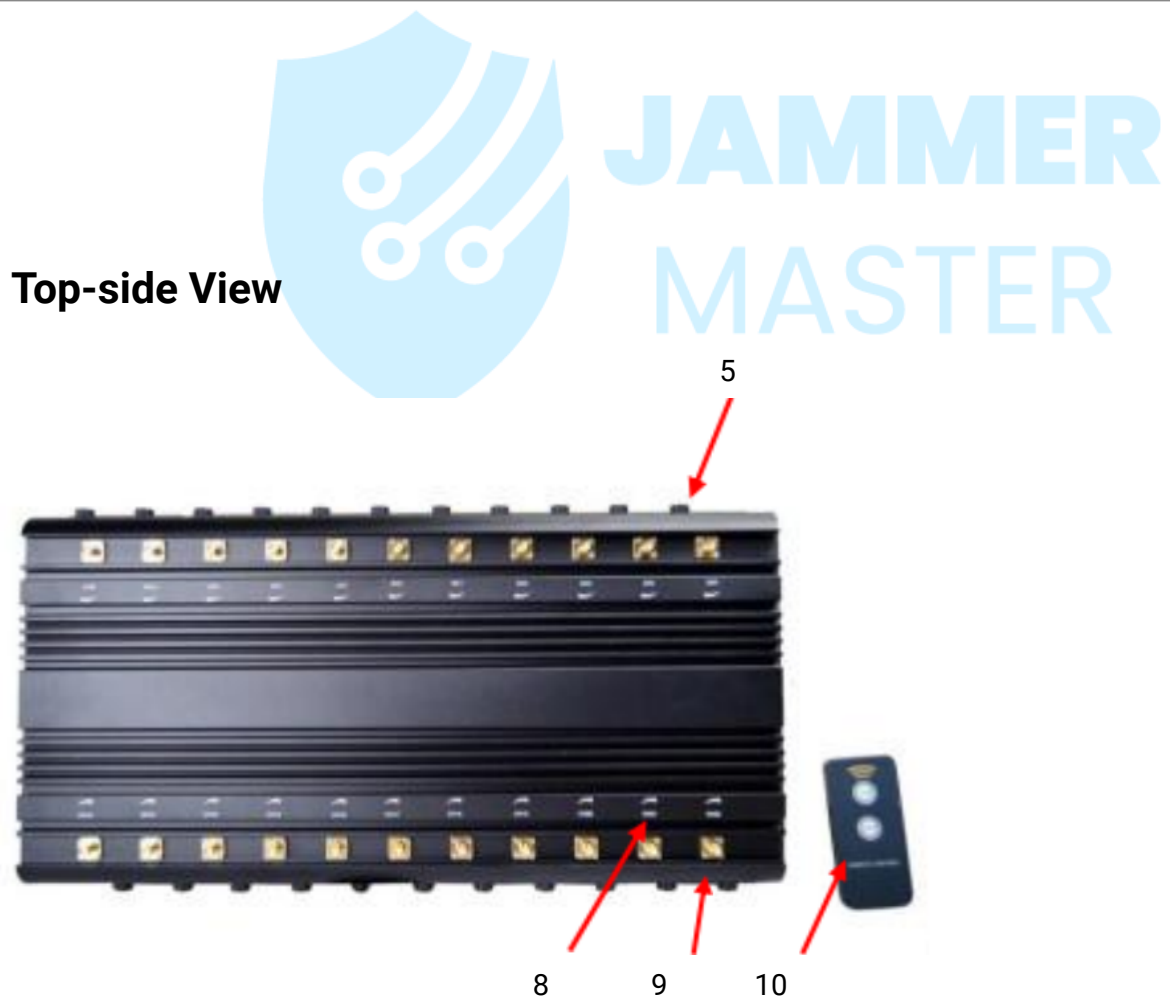

7: Adjust Power Switch

8: Channel No.1-22

9: SMA Connect With Antennas

10: Remote Control

## Unboxing and Initial Setup

Carefully open the packaging and retain it for potential future use, such as storage or shipping purposes. Ensure that all components are in good condition. If you encounter any damaged or defective items, please [contact us](#) immediately.

## Connecting the System



Attach the antenna based on the specified channel number. Once all subassemblies are connected, plug one end of the power supply cable into the device's power port and the other end into the power supply jack.

## Powering On Your Jammer

### Option 1: Local Control



Once all the antennas are connected, simply flip the switch on the left side to the "ON" position. The jammer will then operate normally, and the power indicator will illuminate in green.

### Option 2: Remote Control



After connecting all the antennas, set the switch on the left side to the "ON" position to put the jammer in standby mode. Then, using the infrared remote control, press the "ON" key. The jammer will commence normal operation, and the power indicator will display a green light.

## Adjustable Settings



# JAMMER MASTER

Locate the adjustable switch on the system to fine-tune the RF power output level for each band or to turn off specific bands without affecting the operation of others.

## Powering Off Your Jammer

### Option 1: Local Control

To power off the jammer, simply toggle the switch on the left side to the "OFF" position.

### Option 2: Remote Control

Using the infrared remote control, press the "OFF" key to put the device in standby mode. If you wish to power the device back on, press the remote control's "ON" button. To turn off the device, slide the switch on the left side to the "OFF" position, and the jammer will be deactivated.

## Important Notices

- © Do not switch on the power supply before connecting all antennas.
- © Do not remove antennas while the mainframe is in operation.
- © Ensure proper ventilation when installing the jammer.
- © Position the antennas vertically to the ground for optimal performance.
- © If using the jammer in a vehicle, make sure to connect it to the correct DC12V battery terminals. The minimum output power of the storage battery should be at least 250Watts.





**JAMMER**  
**MASTER**